

Whatsminer Flasher Operation Guide V1.0



Shenzhen Microbt electronic ltd

Content

1.Tool Introduction	3
2. Software Running	3
3. Software Operation	3















1. Tool introduciton

Wmflasher software is used for flashing the firmware to the SD card (SD card, Secure Digital Memory Card) via the card reader, after flashing finished, the SD card could be used to burning the device.

2. Software Running


The way to boot the software:

(1) Find the `wmflasher.exe` in the folder Whatsminer Flasher-win32-x64-1.0.1 as below, double click and the run the software


名称	修改日期	类型	大小
 ffmpeg.dll	17/11/2025 10:30	应用程序扩展	2,965 KB
 icudtl.dat	17/11/2025 10:30	DAT File	10,223 KB
 libEGL.dll	17/11/2025 10:30	应用程序扩展	492 KB
 libGLESv2.dll	17/11/2025 10:30	应用程序扩展	7,860 KB
 LICENSE	17/11/2025 10:30	File	2 KB
 LICENSES.chromium	17/11/2025 10:30	Microsoft Edge HT...	14,913 KB
 resources.pak	17/11/2025 10:30	PAK File	5,897 KB
 snapshot_blob.bin	17/11/2025 10:30	BIN File	315 KB
 v8_context_snapshot.bin	17/11/2025 10:30	BIN File	684 KB
 version	17/11/2025 10:30	File	1 KB
 vk_swiftshader.dll	17/11/2025 10:30	应用程序扩展	5,399 KB
 vk_swiftshader_icd.json	17/11/2025 10:30	JSON File	1 KB
 vulkan-1.dll	17/11/2025 10:30	应用程序扩展	899 KB
 wmflasher	17/11/2025 10:30	应用程序	200,689 KB

3. Software Operation



Wmflasher UI as below.

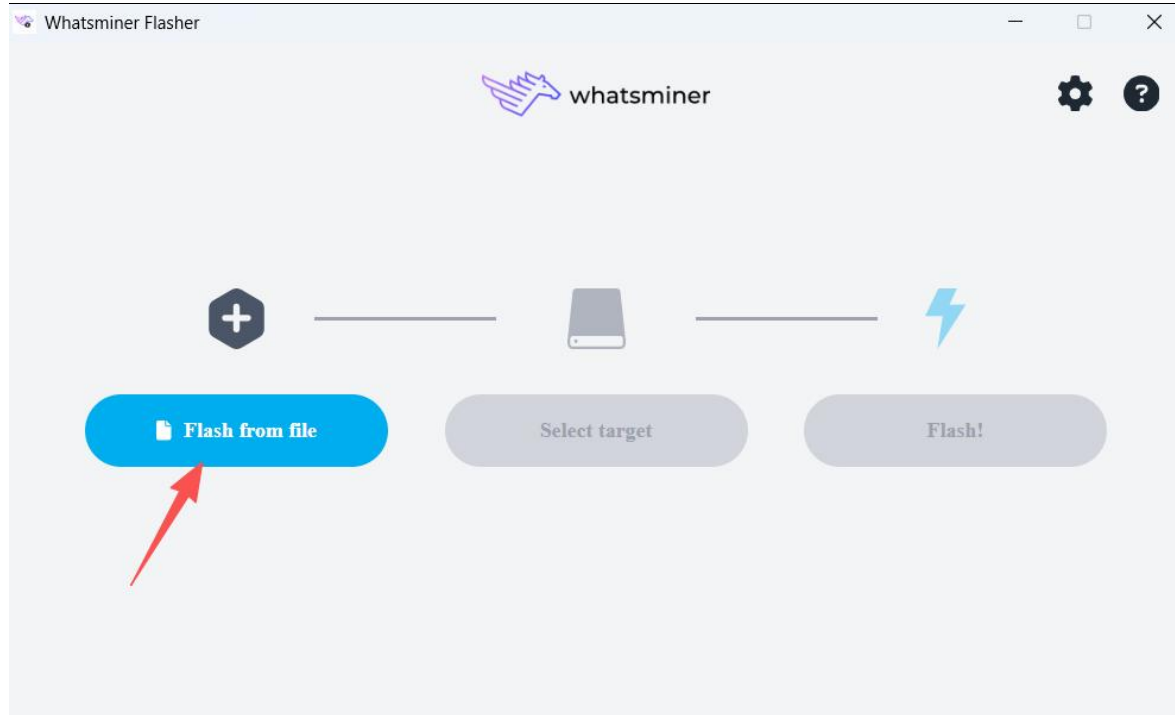



(1) Click the “Flash from file” then select the *.ima file as below showing.

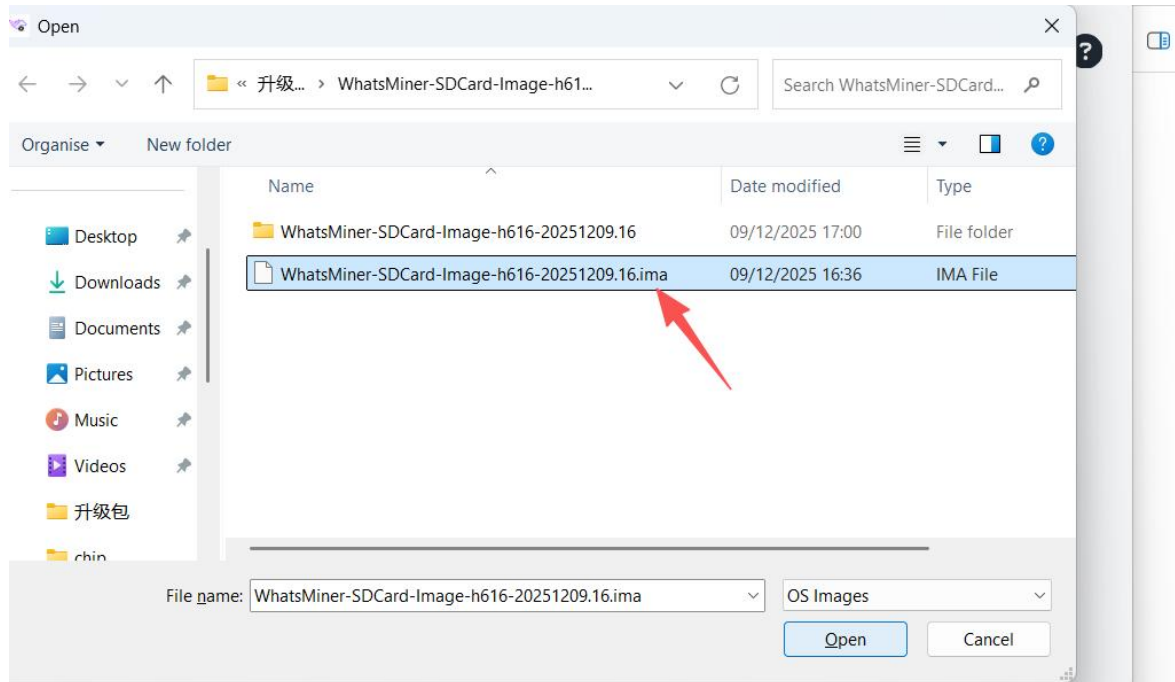



(2) Click the “Select target” and tick the SD card location, then click “Select1” .

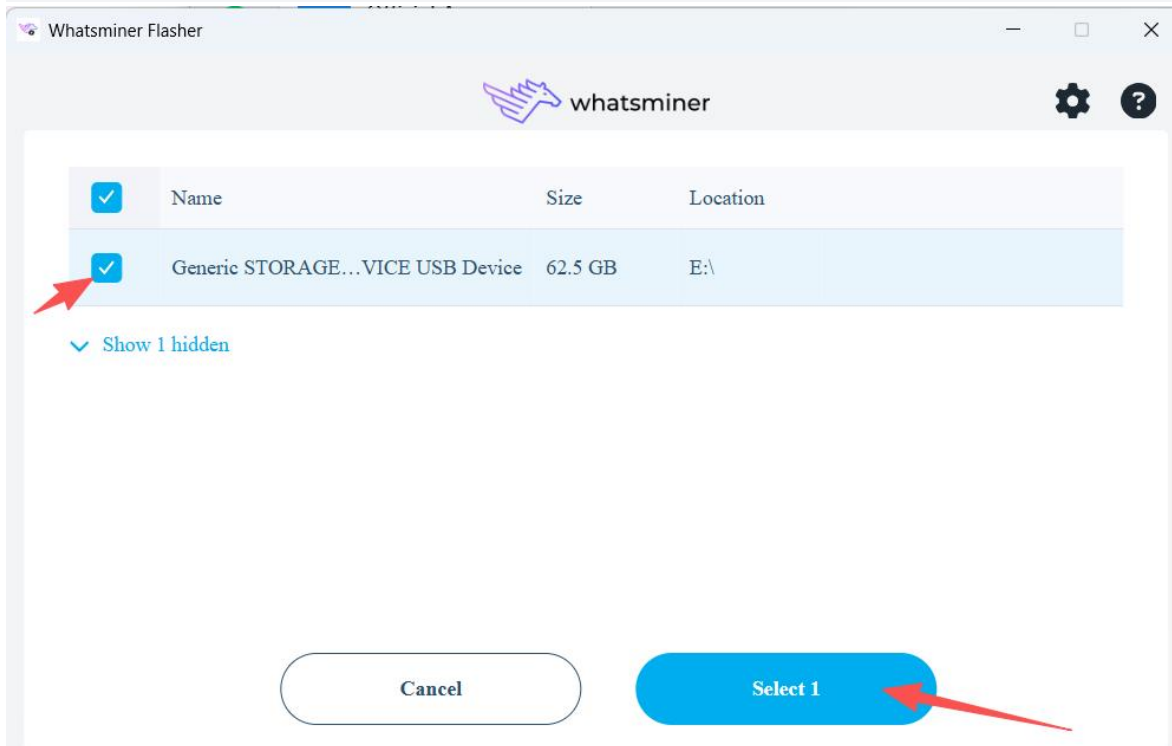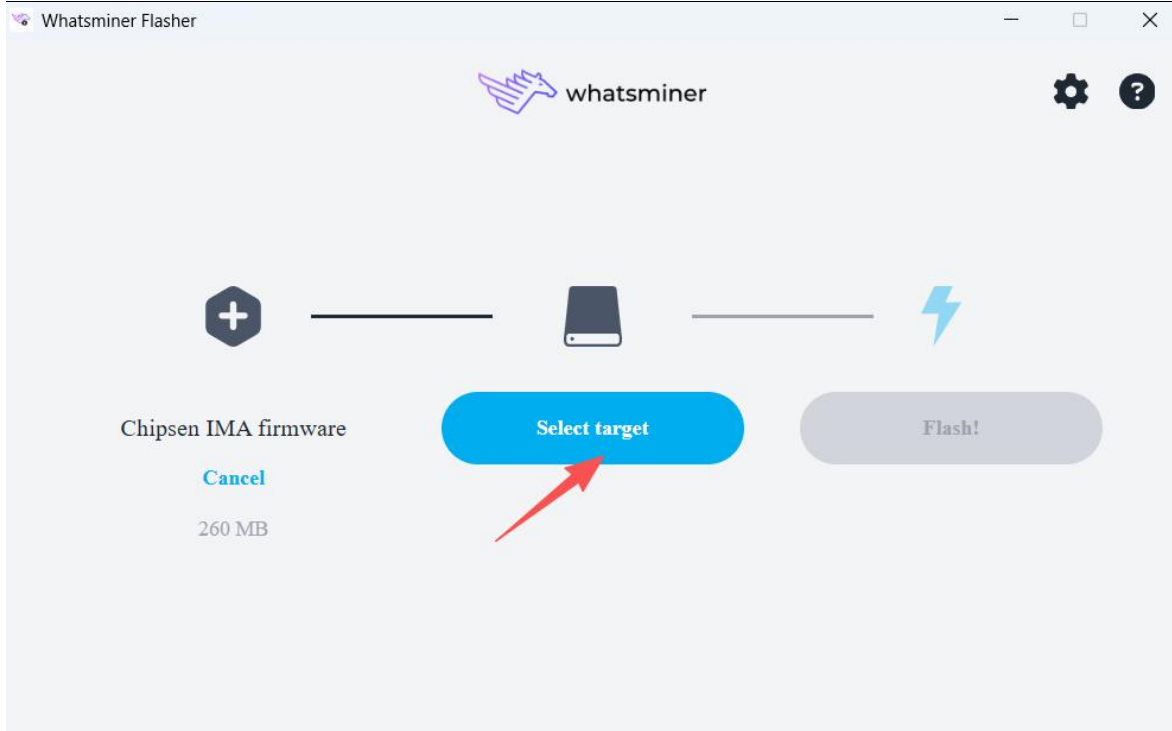

(3) Click the “Flash” button, to start the flashing process, then click” Yes” to continue the flashing.

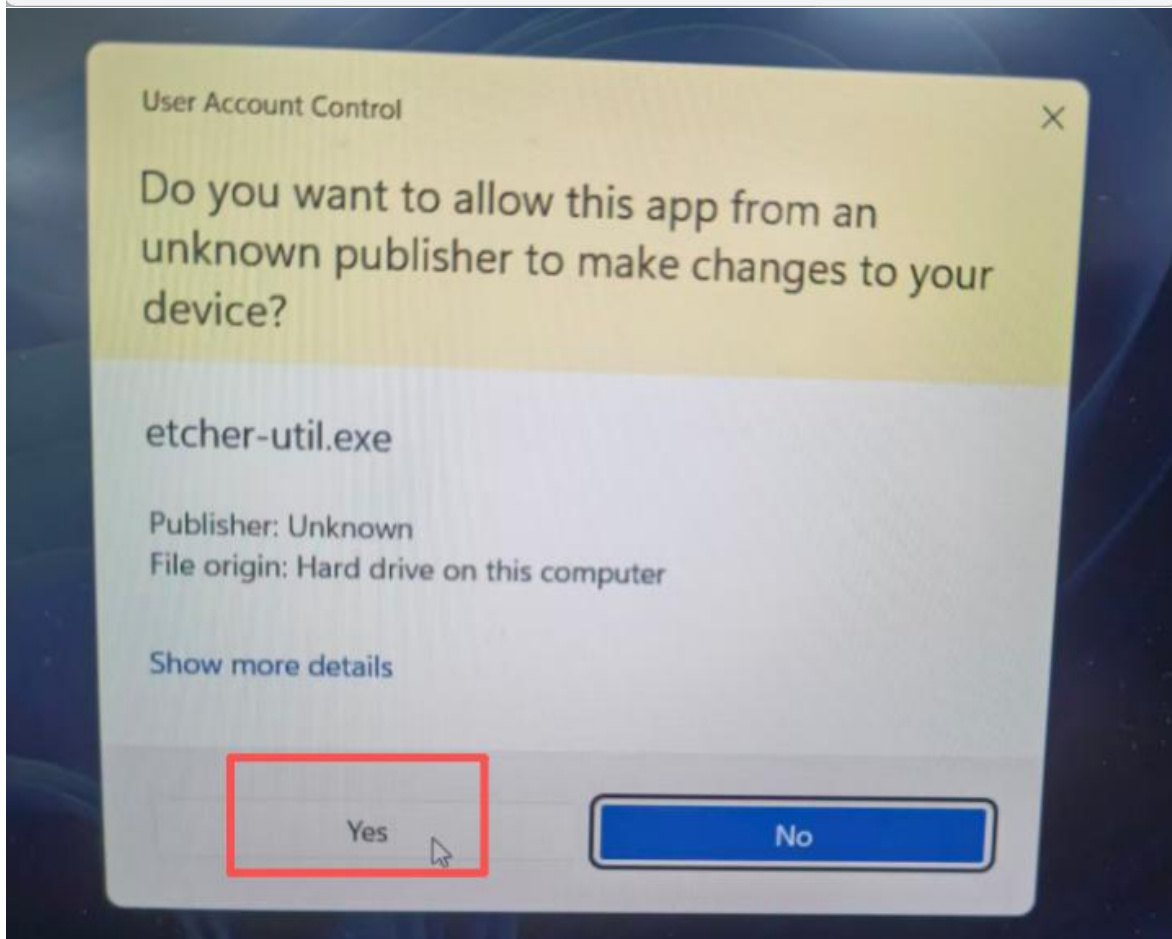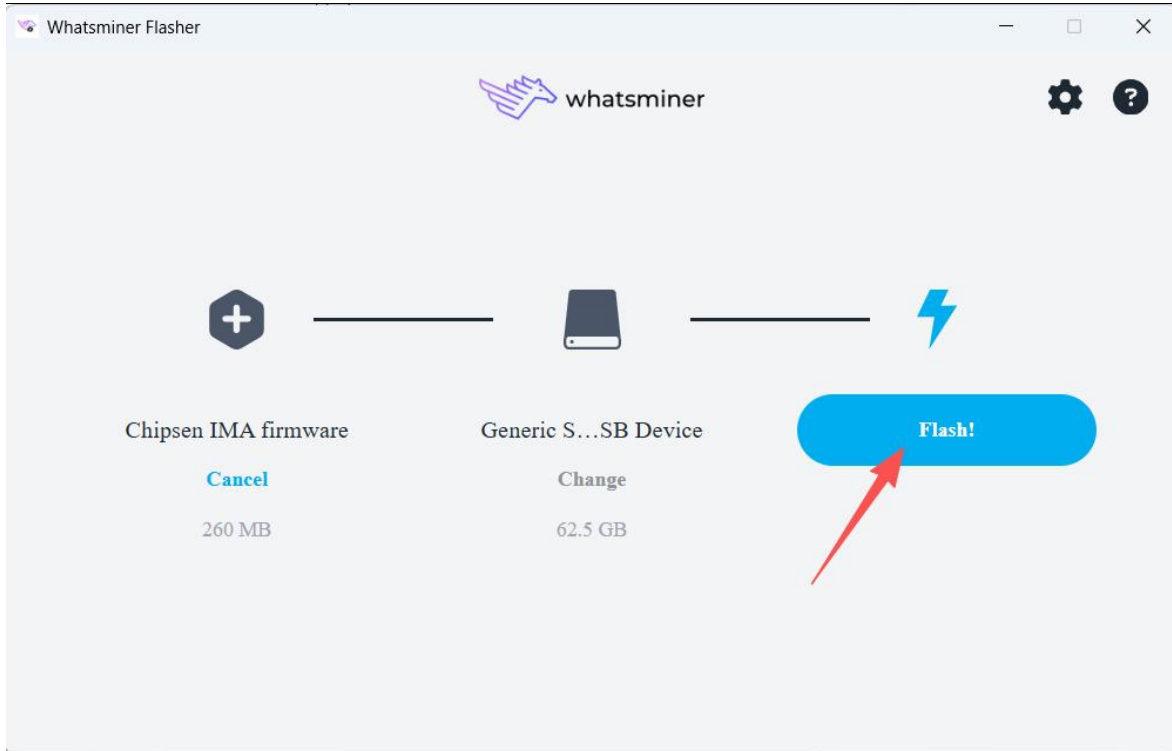

(4) Don't operate anything until the flashing completed .

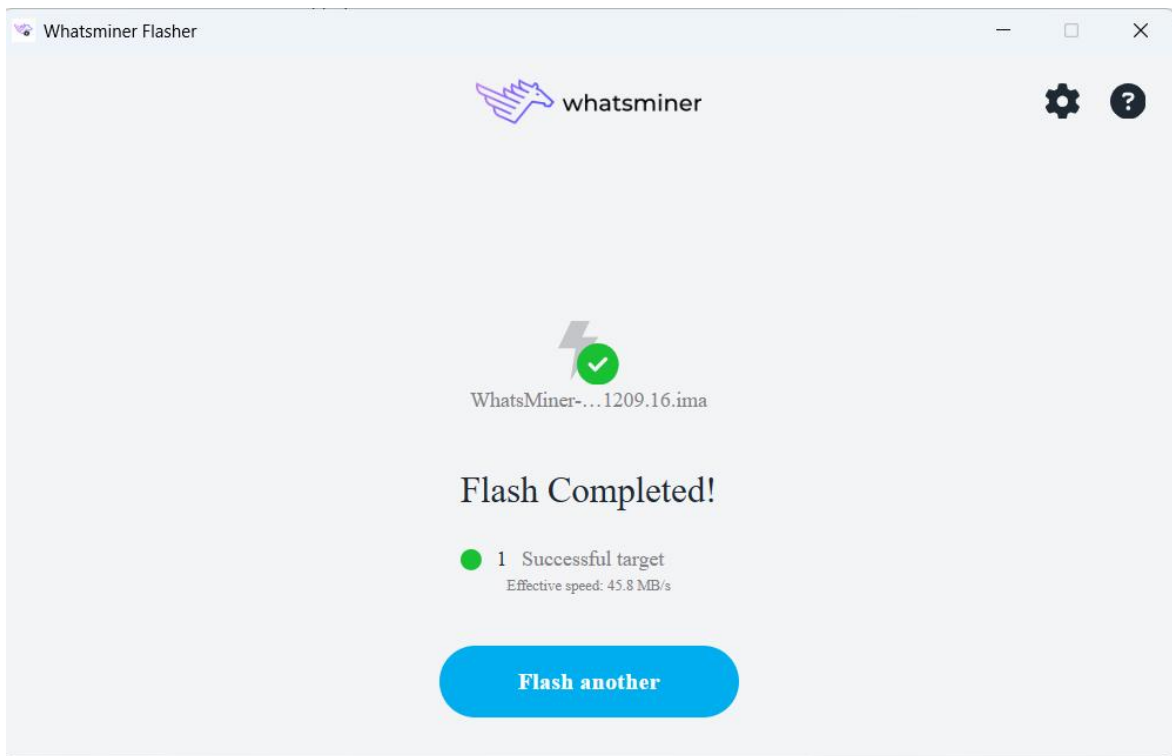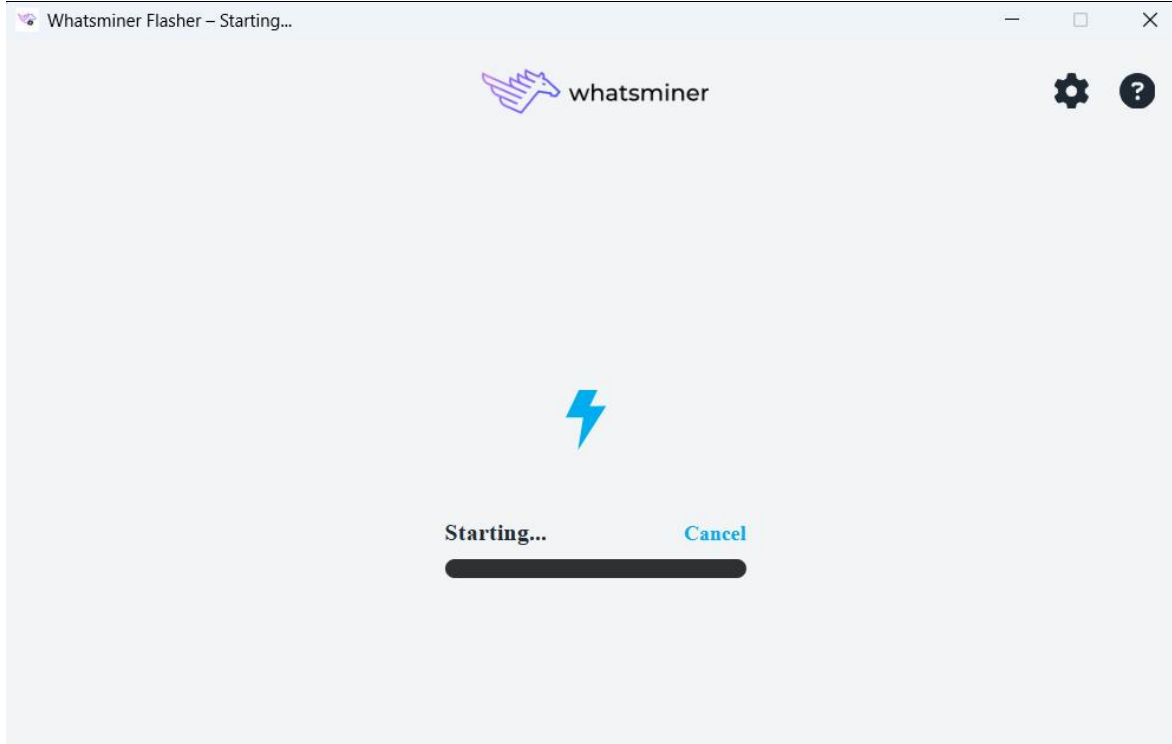

(5) Remove the SD card from PC and take the card to flash the miner as usual.